

INLINE ZINC ANODE 104-D INSTRUCTIONS

The anode should be installed between the filter and heater. The other option is between the pool pump and filter.



- After installation, attach the copper wire to the pool equipment copper bonding wire using the bronze split bolt. (Fig 1)
- Turn the pump on and bleed the air out using the bleeder valve on top of the cap. (Fig 2)

NOTE:

The zinc anode will gradually sacrifice itself (erode). A scaly residue will occur and should be removed with sandpaper about every six months.

The anode should be replaced when it is half its original size. This takes approximately 3 years. The replacement kit is part #104R-KIT. (Fig 3)

If you have any questions, please call Herb at 805-644-2333.

(Fig 1)



(Fig 2)



(Fig 3)



POOL TOOL COMPANY®
pooltool.com

Phone: 805-644-2333

Address:
4848 Colt st. #10
Ventura CA 93003