

# Drain Rite® Water Drain Instructions



## Optional Tools


- Hammer
- Wooden Stakes
- Miter Saw or Hack Saw

## Coverage

Coverage: 100 lineal ft (30.5 m)

## Installation

1. Grade the sub-soil, sloping toward the drain location.
2. In the path designated for the drain, drive 3 1/2 inch wide, short stakes flush with the ground, spaced 30 inches apart.
3. Attach nail clips and couplers.
4. Position the drain over the stakes. Align and nail to the stakes.
5. When drain water is to be conducted away from the immediate deck area, down spouts are used. Saw a rough hole through the bottom of the drain tube. Snap the down spout on the drain and connect to a 1 1/2 inch PVC pipe.

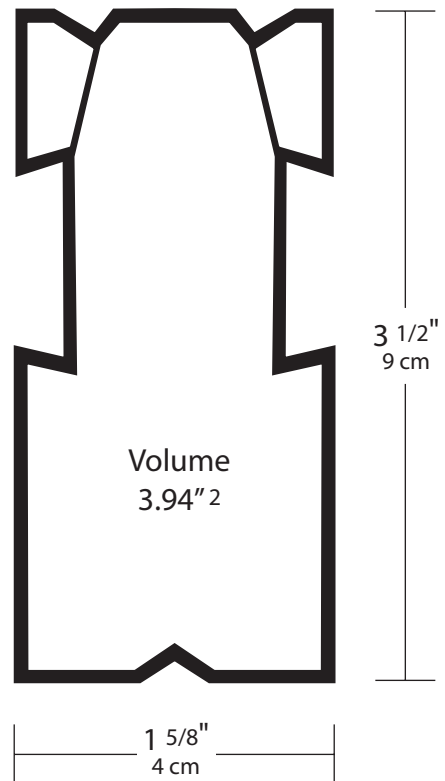

*The manufacturer offers this product and Information in good faith, but without guarantee either expressed or implied, as conditions and methods of use of our product are beyond our control.*